

TROUBLE SHOOTING?

In case of machine irregularity, please check the following first, and if still not restored to normal function, contact your dealer.

Disassembling the machine for repair or any other purposes by unauthorized technician or yourself can be dangerous. **DO NOT ATTEMPT TO REPAIR IT BY YOURSELF.**

PROBLEM	SOLUTION
Pump is not running and spray does not come out when hands are placed underneath the nozzle.	<ul style="list-style-type: none"> • Check power switch-> if it is at OFF position , then turn on power and retry. • Check batteries -> if they are incorrectly installed, re-install batteries as shown by the battery polarity sign. • Check battery indicator -> if indicator flashes, replace new batteries.
Pump is running but no spray comes out when hands are placed underneath the nozzle.	<ul style="list-style-type: none"> • Check sanitizer -> if it is below LOWER LEVER, fill the container with sanitizer.
Pump is running but no spray comes out when hands are placed underneath the nozzle and there is enough sanitizer in the container	<ul style="list-style-type: none"> • Air may be trapped in the pump -> shake the Top Part , re-install the Top Part, and retry.
Sanitizer seems coming out but is stuck	<ul style="list-style-type: none"> • Check the Top Part to see if there is any moisture or sanitizer. If moisture or sanitizer is found in the Top Part -> turn off power and wait for 3 – 4 hours to let the moisture or sanitizer dry up. Then turn on power and retry.
Sanitizer continues spraying or comes out in excessive quantity	<ul style="list-style-type: none"> • Check the surrounding area -> if the machine is placed on a shiny, reflective surface, put a cloth or pad underneath the machine to block reflection.

WARRANTY & SERVICE

Before sending the machine for repair, check the TROUBLESHOOTING first. If the irregularity remains, please contact the following dealers.

ABOUT FREE REPAIR

[Send for Repair](#)

- When the machine breaks down while used under the conditions as specified in this manual during the warranty period, it is guaranteed with free repair.
- To send the machine for free repair, contact your dealer and present this warranty with the machine.
- Postage and travelling expense entailed from sending the machine for repair shall be borne by the customer.
- For repair of the machine given as a gift or due to house moving, contact your dealer in advance.
- This warranty will not be reissued, please store safely.
- This warranty is only valid within the domestic territory.
- Repair due to the following conditions, notwithstanding still inside the warranty period shall entail charges.
 1. Inadequate use or self repair, modification that resulted in damage or irregularity.
 2. Damage or irregularity due to moving or drop after purchase.
 3. Damage or irregularity due to fire, earthquake, fall of heavy objects and other natural disasters, public hazards, salt corrosion, connected to power other than specified or irregular voltage.
 4. Used for purposes other than intended (such as transported in automobile, vessel).
 5. Outside of the terms set forth in the warranty.
 6. When purchase date, customer name or deal information are not filled out, or when the warranty has been tempered or modified.
 7. No replacement of wear goods.

WARRANTY

MINI HANDY WASHER
Manufacturer Model No. HM2

* Warranty Period	Date of Purchasing	1 Year <i>Except for wear goods</i>	
* Dealer	Address, Store, Tel		
To be filled by customer	Address		
	Name	Tel	
	Repair Record		

Notice to Dealers, * THIS COLUMN MUST BE FILLED

※ This warranty guarantee free repair during the period as stipulated herein and under the conditions specified in this manual, and is not in conflict with customer legal rights. In case of any question concerning repair during the warranty period, contact our dealers.

HEALTHY CONCEPT



AUTO HAND-WASH STERILIZATOR MINI HANDY WASHER OPERATING MANUAL

with Warranty

Thank you for purchasing this product.
Please read the manual before use
and keep the manual for your future reference.

Microprocessor Sensoring, Touch-Free and No worry!



WARNING : ● KEEP THE PRODUCT AWAY FROM HEAT, SPARK, AND FLAME.
● DO NOT PUT ANY HAZARDOUS SUBSTANCES INTO THE PRODUCT.

CAUTION



Inhibition

- Keep the product away from heat, sparks, and flame to prevent fire or scalding.
- Do not put any hazardous substances into the product. (Such as acid, alkaline, toxin, and etc.)
- Keep face from the mist nozzle to prevent triggering the sensor to spray that might cause eye injury.
- Don't put sand, water, and dust to prevent nozzle clogging, and agent contamination.



Agent Attention


- Only certified hand sanitizer or antiseptic solution with the product only. Related information: (<http://www.cdc.gov/handhygiene>)
- Keep flame away from agent while filling or storing to prevent combustion.
- Sanitizer is for external use only. Keep the sanitizer out of reach of children.
- In case of eye contact, immediately flush eyes with water.
- In case of spill, please use damp cloth and water to clean the spill and make the product dry.
- Please store sanitizer and machine with room temperature between 5°C~40°C. This can prevent that can reduce spray volume and sterilization efficacy.
- * Before using the agent, please read its cautions thoroughly.



Machine Attention

- Do not fill this machine with high-viscosity agent to prevent nozzle clogging.
- While the machine top is open, dust or alien substances might get inside and cause nozzle clogging and faulting.
- When adding the agent, do not exceed the MAX LEVEL mark to prevent overflow and faulting.
- Before turning on the machine, check to see if the agent has fallen below the LOW LEVEL mark. Machine running without agent can lead to breakdown.
- In installing or moving the machine, keep machine vertical; tilting or horizontal placement can cause agent leak, resulting in machine breakdown.
- The machine is not waterproof. Do not use in bathroom or humid places.
- Use alkaline batteries (C batteries), be sure to follow the polarity guide (+) and (-) when inserting batteries.
- When not using the machine, (1) turn Power Switch to OFF; (2) remove batteries; (3) pour out the agent remaining in the container, and let dry thoroughly.
- This product is designed for indoor use, do not use outdoors.
- When placed on smooth, shiny surface such as stainless steel, the sensor function may be interfered, place a cloth or pad underneath the machine.
- The machine is designed with infrared sensor, and cannot function in strong-infrared light environment such as direct sunlight.
- Do not expose the machine directly to pesticides.
- * In moving, please hold the centre part of the machine (where the agent container is located).

DIAGRAM & FUNCTION

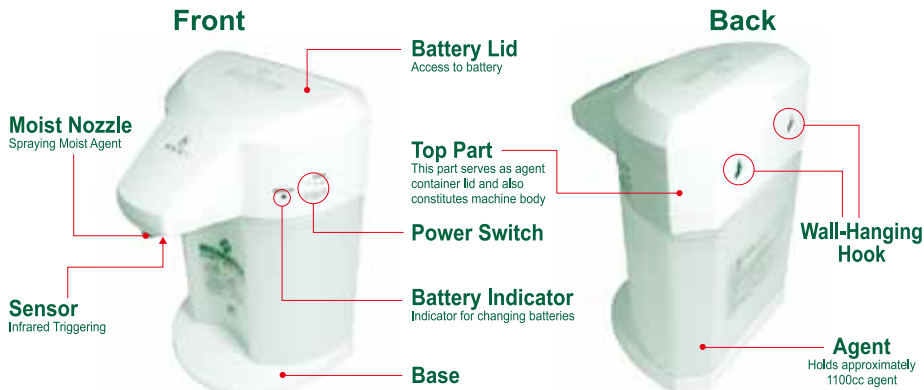

SPECIFICATION

Spray	IR Sensor triggered spray	Agent Container Capacity	About 1100 cc
Power Supply	2 C-size batteries	Spray Volume	0.8~1.5cc , per spray (about one second)
Pump	Gear Pump	Size	140mm x 140mm x 210mm
		Weight	About 620 g (including batteries)

※ In case of product improvement, some specs may be changed without notice.

INSTRUCTION

■ Adding Agent

Open the TOP PART of main body and add agent.


* Filling of agent should not exceed the MAX LEVEL mark to prevent leak or faulting.



■ Installation of Batteries

Turn power switch to OFF, open battery lid and place the two enclosed alkaline batteries in the directions guided.

* DO NOT use batteries of two different brands, nor NEW and OLD batteries together.

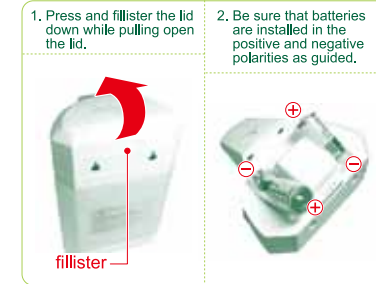

ABOUT ON/OFF SWITCH


Power is controlled by the ON and OFF switch.

* When not using, be sure to switch to OFF.

CAUTION

While the power is ON and the battery is low, the battery indicator will become RED and FLASH. Replace with new alkaline batteries.

* DO NOT use batteries of two different brands, nor NEW and OLD batteries together.

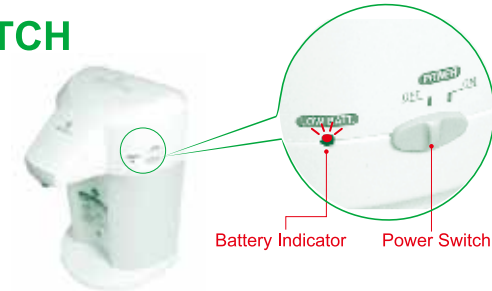

TO USE (Sterilization Process)



The moist nozzle's sensor will be activated and a fixed amount of agent moist will be sent out when you place your palms in front of the HM2 Auto Hands sterilizer.

* At this time if no agent mist is produced, move your hands slightly.



Use palm to catch mist until the spray stops.



Spread agent thoroughly over palm, fingers, nails, etc.; rub both hands together gently and let dry naturally.

MACHINE MAINTENANCE

Cleaning the sensor

- When the sensor is covered with dust or fingerprint, the sensor function will be affected, and might result in function irregularity. Clean the sensor's two lenses with cotton swab gently to maintain normal function.

Stain adhesion to the machine

- Wipe with soft cloth gently. For heavy stain, damp cloth with water or lukewarm water to wipe and dry with a dry cloth.
- THE HANDY MIST MINI IS NOT WATERPROOF. Be sure not to wipe with drenched cloth (WIPE WITH DAMP CLOTH). DO NOT WASH DIRECTLY UNDER RUNNING WATER.
- Do not use any diluted detergent, detergent, metal brush, nylon brush, chemical wipe, bleach, etc.